CREATIVE

Quick Start

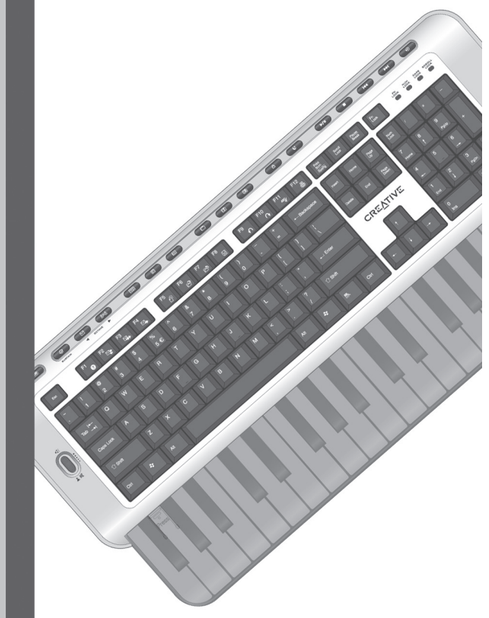

PRODIKEYS™ PC-MIDI

1 Connect Creative Prodikeys PC-MIDI

Turn off your computer, and disconnect the power cable and any existing keyboard, before connecting Prodikeys™ PC-MIDI.

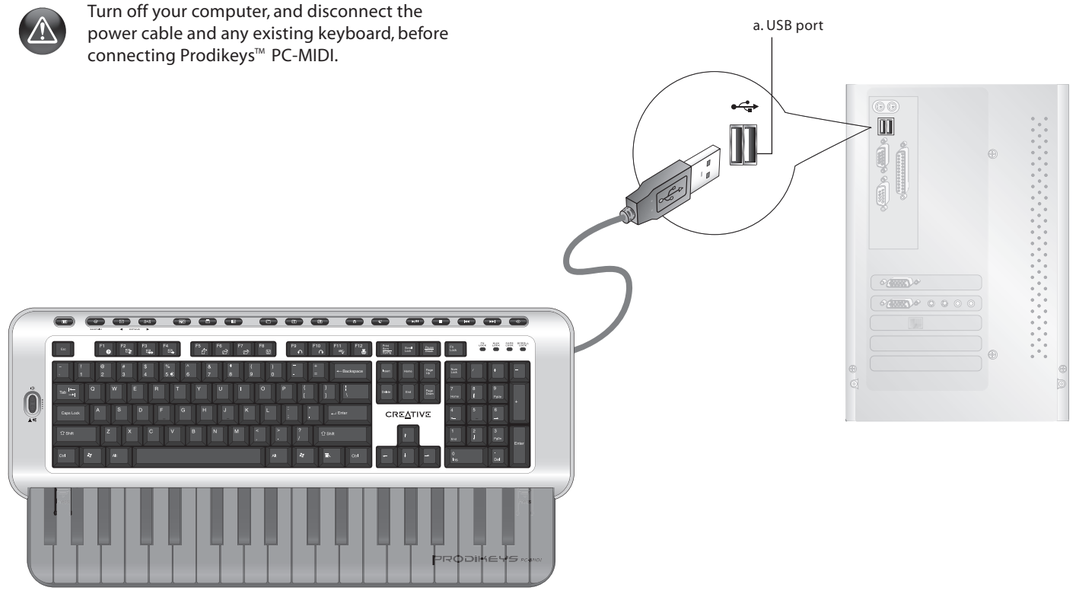

2 Install drivers and software

1. Insert the Creative Prodikeys PC-MIDI software Installation CD into your CD-ROM drive. Your CD should start automatically. If it does not, follow the steps below:
   i) Double-click the **My Computer** icon. Alternatively, click **Start** --> **My Computer**.
   ii) Right-click the **CD-ROM/DVD-ROM drive** icon, and then click **AutoPlay**.
2. Follow the instructions on the screen to complete the installation.
3. Restart the computer when prompted to do so.

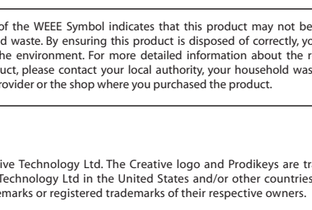

- Creative Product
- Produit Creative
- Prodotto Creative
- Creative-Produkt
- Producto Creative
- Creative Product
- Creative Produkt
- Creative tuote
- Creative Produkt

- Creative produkt
- Creative produkt
- Výrobek firmy Creative
- Produto Creative
- Creative продукт
- Creative Labs termék
- Προϊόν Creative
- „Creative" produktas
- Produkt Creative

- Dealer Stamp
- Cachet revendeur
- Timbro del rivenditore
- Händlerstempel
- Sello distribuidor
- Dealer stempel
- Forhandler stempel
- Jälleenmyyjä leima
- Återförsäljare stämpel

- Forhandler stempel
- Pieczątka dilera
- Razítko prodejce
- Carimbo do Agente
- Печать дилера
- A kereskedelmi cég bélyegzoje
- Σφραγίδα Αντιπροσώπου
- Pardavėjo spaudas
- Pečiatka predajcu

- Purchase Date
- Date d'achat
- Data di acquisto
- Kaufdatum
- Fecha de compra
- Aankoopdatum
- Kjøbsdato
- Ostopäivä
- Inköposdatum

- Købsdato
- Data zakupu
- Datum koupy
- Data de compra
- Покупное число
- Az vásárlás dátuma
- Ημερομηνία Αγοράς
- Įsigijimo data
- Dátum nákupu

- Name and Address of Customer
- Nom et adrese du client
- Nome e indirizzo del cliente
- Name & Anschrift des Käufers
- Nombre & dirección del cliente
- Naam & adresvan de klant
- Kundens navn & adress
- Asiakkaan nimi & osoite
- Kundens namm & adress

- Kundens navn & adresse
- Imię i adres klienta
- Meno a adresa zákazníka
- Nome e morada do comprador
- Фамилия и адрес покупателя
- A Vásárló neve és címe
- Ημερομηνία Αγοράς Όνομα & Διεύθυνση του Πελάτη
- Pirkėjo vardas, pavardė ir adresas
- Meno a adresa zákazníka

PN: 03CF004000002 Rev.A

3 Launch Product Tutorial

1. Press the Music button.
   The Prodikeys Launcher application appears.
2. Click the Product Tutorial icon .
   The Product Tutorial launches.
3. Follow the interactive tutorial to learn more about customizing and getting started with Prodikeys PC-MIDI.

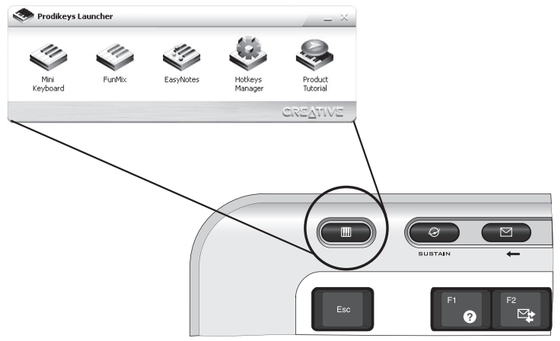

For more information on Prodikeys PC-MIDI applications, read the User's Guide in the Installation CD.

Product Registration

Registering your product ensures you receive the most appropriate service and product support available. You can register your product during installation or at **www.creative.com/register**.

Please note that your warranty rights are not dependent on registration.

Customer Support Services & Warranty

Creative Knowledge Base
Resolve and troubleshoot technical queries at Creative's 24-hour self-help Knowledge Base. Go to **www.creative.com**, select your region and then select **Support**.

You can find Customer Support Services, Warranty and other information in the Installation CD.

Customer Support Services	**d:\support\<region>\<language>\support.chm**
Warranty	**d:\warranty\<region>\<language>\warranty.chm** Please keep your Proof of Purchase for the duration of the warranty period.
User's Guide	**d:\manual\<language>\manual.pdf***

(replace **d:** with the drive letter of your CD-ROM/DVD-ROM drive, <**region**> with the region that you are in, and <**language**> with the language that your document is in).

* The User's Guide is available in English only.

Keep this document for future reference.

The use of the WEEE Symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help protect the environment. For more detailed information about the recycling of this product, please contact your local authority, your household waste disposal service provider or the shop where you purchased the product.

CE

Copyright © 2005 Creative Technology Ltd. The Creative logo and Prodikeys are trademarks or registered trademarks of Creative Technology Ltd in the United States and/or other countries. All rights reserved. All other products are trademarks or registered trademarks of their respective owners.